



OWNER'S MANUAL

ELECTRIC AIR PUMP MODEL No. AP-138A



SAFETY WARNING:

BEFORE USING THIS PUMP TO INFLATE OR DEFLATE YOUR AIRBED OR OTHER INFLATABLES, PLEASE FOLLOW THESE INSTRUCTIONS.

- To reduce the risk of fire or electric shock, do not use this product with any solid-state speed control device.
- To avoid risk of injury, do not direct stream of air at face or body.
- To avoid risk of electric shock, do not drop unit into water, do not expose to rain, or stand on a wet surface when using.
- Do not operate the Air Pump more than 10 minutes continuously, cool down before next use.
- Avoid sand, small rocks and other debris from being sucked into the INFLATION or DEFLATION PORTS of the Air Pump.
- The power cord cannot be replaced. If the cord is damaged, the appliance should be scrapped.
- The Air Pump should never be left unattended when plugged in.

IMPORTANT

1. Do not operate the Air Pump more than 10 minutes continuously, as overheating may occur and pump may automatically shut off for your safety.
2. Unplug electrical power cord when not in use.
3. Follow the inflating and deflating guide of the inflatable appliance.
4. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify this safety feature.
5. Household use only.
6. To reduce the risk of electric shock or injury, use indoor only.

READ AND SAVE THESE INSTRUCTIONS

OPERATION INSTRUCTIONS:


Carefully follow instructions below. Never exceed inflatable item's recommended pressure. Bursting caused by excessive pressure may cause serious injury.

TO INFLATE:

1. Open air valve on inflatable item.
2. Plug power cord into 120 volt AC electrical outlet.
3. Select suitable nozzle to fit inflatable valve.
4. Push the nozzle firmly into the INFLATION PORT on the pump.
5. Push pump with nozzle firmly into valve on INFLATABLE ITEMS
6. Turn on the pump to begin inflation.

TO DEFLATE:

1. Open air valve on inflatable item.
2. Plug power cord into 120 volt AC electrical outlet.
3. Select suitable nozzle to fit inflatable valve.
4. Push the nozzle firmly into the DEFLATION PORT on the pump.
5. Push pump with nozzle firmly into valve on INFLATABLE ITEMS
6. Turn on pump to deflate.

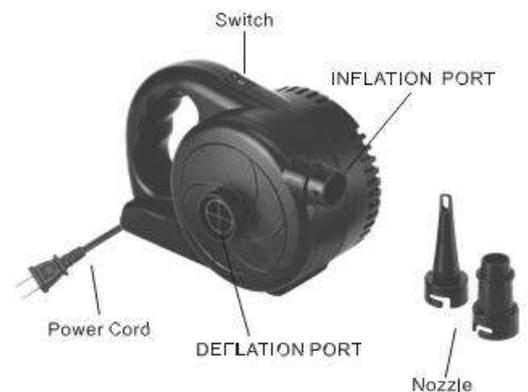

Maintenance

1. Unplug or disconnect the appliance from the power supply before servicing.
2. Store indoors and keep dry.
3. To keep the Air Pump clean, wipe with a dry or damp cloth.